

3Way CCT Adjustable 15" Flush Mount Fixture Instruction Instructions Panneau DEL Mince

VO-RF15W24-120-D-3Way

CAUTION

TURN OFF THE MAIN POWER AT THE CIRCUIT BREAKER BEFORE INSTALLING THE FIXTURE, IN ORDER TO PREVENT POSSIBLE SHOCK.



GENERAL

- All electrical connections must be in accordance with local and National Electrical Code (N.E.C.) standards. If you are unfamiliar with proper electrical wiring connections obtain the services of a qualified electrician.
- Remove the fixture and the mounting package from the box and make sure that no parts are missing by referencing the illustrations on the installation instructions.



VO-RF15W24-120-D-3Way

Lumens per fixture
Nombre de lumen par luminaire

2000LM

Total consumption
Consommation totale

24W

Light color
Couleur de la lumière

3000K-4000K-5000K

IMPORTANT SAFETY INFORMATION

- WARNING: RISK OF SHOCK** House electric current can cause painful shock or serious injury unless handled properly. For your safety, always remember to:
 - Turn off the power Supply at the fuse or circuit breaker box before you install the fixture.
 - Ground the fixture to avoid potential electric shocks and to ensure reliable starting.
 - Double-check all connections to be sure they are tight and correct.
 - Wear rubber soled shoes and work on a sturdy wooden ladder.
- This fixture is designed for use in a circuit protected by a fuse or circuit breaker. It is also designed to be installed in accordance with local electrical codes. If you are unsure about your wiring, consult a qualified electrician or local electrical inspector, and check your local electrical code.
- WARNING: RISK OF CUTS** Some metal parts in the fixture may have sharp edges. To prevent cuts and scrapes, wear gloves when handling the parts.
- Account for small parts and destroy packing material, as these may be hazardous to children.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.
Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause

harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help.

Warranty:

Votatec® offers a warranty of 5 years from the date of purchase that covers repair or replacement of defective parts of the housing, optics, and electronics.

Garantie :

Votatec® offre une garantie de 5 ans à partir de la date de l'achat qui couvre la réparation ou le remplacement des pièces du boîtier, des pièces optiques et électroniques défectueuses.

3Way CCT Adjustable 15" Flush Mount Fixture Instruction Instructions Panneau DEL Mince

VO-RF15W24-120-D-3Way

THE PRODUCT PACKAGE INCLUDES THE FOLLOWING COMPONENTS:

 
1. 1 piece Round Flush mount housing
2. 1 piece Round Flush mount Diffuser (Shipped as part of flushmount housing)
3. 3 pieces Wirenuts (in parts bag)
4. 2 pieces 1-1/2" Electrical Box Screws (in parts bag)
5. 1 piece Installation Manual



MOUNTING INSTRUCTIONS

1 CHOOSING A COLOR TEMPERATURE BEFORE INSTALLING

- Use the slide switch to choose a color temperature before installing. 5000K (5K), 4000K (4K), 3000K (3K).

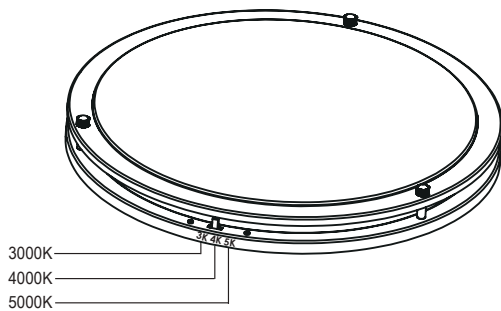

3-way color changing:

- ① You can lock in one color temperature, change among multiple color temperatures, dim from 10%-100%.
- ② When the slide switch is set to SW (Soft White), the color temperature is set at 3000K.
- ③ When the slide switch is set to BW (Bright White), the color temperature is set at 4000K.
- ④ When the slide switch is set to DL (Daylight), the color temperature is set at 5000K.

2 MOUNTING INSTRUCTIONS

1. Carefully unpack and unwrap fixture.
2. Loosen 3 screw counter counterclockwise (figure 1)
3. Install the electrical box screws in the junction box (figure 2)
4. Check that black, white and ground wire are extending from the back of the fixture. Before wiring fixture to the power supply, turn off electricity at fuse or circuit breaker box. Fixture must be grounded to avoid potential electrical shock and to ensure reliable lamp starting.
5. Using WIRE NUTS to connect GROUND WIRE from fixture with the one from the junction box. Connect the black and the white fixture wire with the two wires of the same colors from the junction box. (figure 3.)
6. Put the fixture plate across the screw of the lock in figure 2, then rotate fixture plate clockwise and lock it tightly with the screw lock (figure 4).
7. Securely mount the fixture plate to the junction box firmly (figure 5)
8. Tighten 3 screw clockwise (figure 6)
9. Restore power to the electrical box. Turn the light switch on to activate the fixture.
10. Supplier at 120Vac.

FIG 1

 


FIG 2

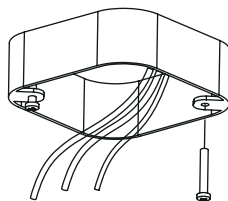 


FIG 3

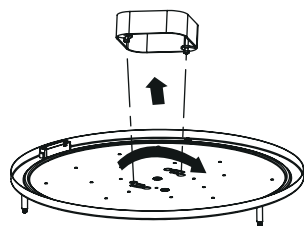 
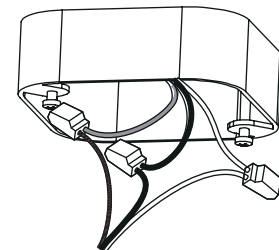 


FIG 4

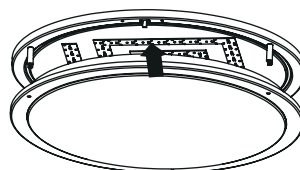 


FIG 5

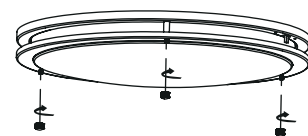 


FIG 6

SAVE THESE INSTRUCTIONS