


Operating Instruction

Resume

Application: Factory, Office Space, Bank, Hospital, Supermarket, Subway, School and various other in-door facilities.
This product serves as direct replacement to traditional T8/T10 Lighting.

Dimensional Drawing

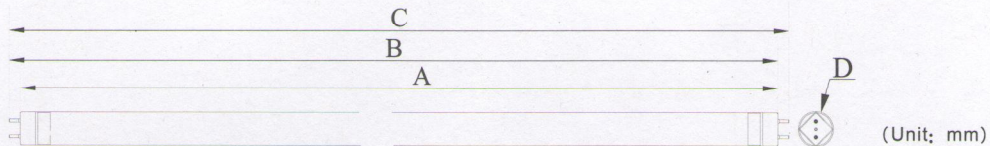


Length	A		B		C		D
	Max	Min	Max	Min	Max	T8	
1.5m	1500.0	1504.7	1507.1	---	1514.2	Φ27.6	
1.2m	1199.4	1204.1	1206.5	---	1213.6	Φ27.6	
0.9m	894.6	899.3	901.7	---	908.8	Φ27.6	
0.6m	589.8	594.5	596.5	---	604	Φ27.6	

Installation steps

Method One:

Replace the electronic ballast (Remove the electronic ballast)


1. Before installation, cut off power supply
2. Remove the electronic ballast
3. Remove A.B. Terminal Line
4. Connect C to Tube's N Connector, Connect D to Tube's L Connector
5. Connector the lamp-socket (C and D) to Power Supply's L and N Connector (See illustration)

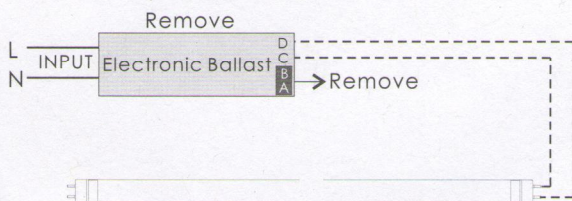

Method Two:

The Most Energy-Efficient Method

1. Before installation, cut off power supply
2. Replace starter
3. Remove ballast, connect power supply input L and N to tube's L and N. (See illustration)

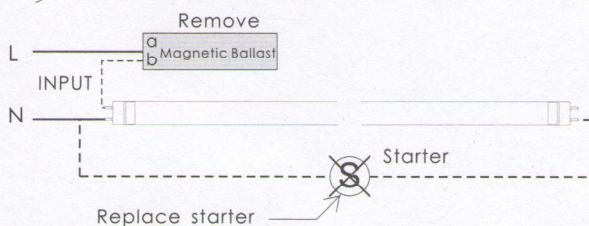

- Please read this manual carefully before operation.
- Retain it for future reference.